


Bruksanvisning 1363.100

Monteringsinstruktioner

Montera det separata benet på värmaren genom att trycka det ordentligt på kontrollpanelen och ändfenan enligt vad som visas i figuren. Kontrollera värmarens stabilitet genom att ställa den på en jämn och plan yta. Montering av benet på värmaren.

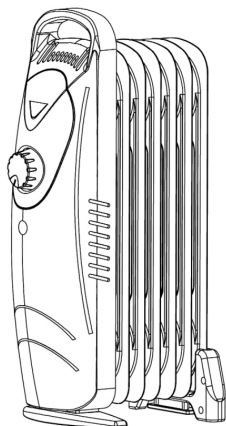

Tekniska data

Post	Symbol	Value	Unit
Heat Output			
Nominal heat output:	P _{nom}	0,6	kW
Minimum heat output (indicative):	P _{min}	N/A	kW
Maximum continuous heat output:	P _{max,c}	0,578	kW
Power Consumption			
In off mode	P _o	0,23	W
In standby mode	P _{sm}	N/A	W
In idle mode	P _{idle}	0,22	W
In network standby	P _{ns}	N/A	W
Standby mode with display of information or status		No	
Seasonal space heating energy efficiency in active mode	ns,on	85	%
Post			
Unit			
Type of regulation for heat output/room temperature			
With mechanic thermostat room temperature control Yes			

Bruksanvisning

- Välj en lämplig plats för värmaren med hänsyn till ovanstående säkerhetsanvisningar.
- Anslut värmarens stickpropp till ett lämpligt eluttag.
- Vrid termostatknappen helt medurs till den högsta inställningen.
- Strömindikators tänds när värmeelementet är på.
- När den önskade rumstemperaturen har uppnåtts ska termostatknappen vridas långsamt moturs tills du hör ett klick från termostaten och strömindikators slocknar. Därefter kommer värmaren att hålla lufttemperaturen i rummet vid den inställda temperaturen genom att strömindikators slås på och av automatiskt.

Säkerhet

Följ alltid grundläggande försiktighetsåtgärder när du använder elektriska apparater, inklusive följande:

VARNING: För att minska risken för brand, elstöt eller personskada:

- Denna apparat är inte avsedd att användas av personer (inklusive barn) med nedsatt fysisk, sensorisk eller psykisk förmåga, eller av personer med brist på erfarenhet och kunskap, såvida de inte är under uppsikt eller har fått anvisningar gällande korrekt användning av apparaten av en person som ansvarar för deras säkerhet.
- Barn måste övervakas för att säkerställa att de inte leker med apparaten.
- Apparaten är endast ämnad för hemmabruk.
- Anslut apparaten till enfas AC-försörjning med den spänning som anges på typskylten.
- Täck inte över värmaren eftersom det kan leda till överhettning.
- Lämna aldrig värmaren utan uppsikt när den används. Ställ alltid in apparaten i OFF-läge och koppla bort den från eluttaget när den inte används.
- Var extremt försiktig när du använder värmaren eller den används i närheten av barn, handikappade eller äldre personer och när värmaren lämnas i drift och utan tillsyn.
- Värmaren får inte placeras omedelbart under ett eluttag.
- Dra inte sladden under heltäckande matta och täck inte sladden med mattor, gångmattor eller liknande. Placera sladden borta från trafikerade områden och där man kan snubbla över den.
- Använd inte värmaren om den har en skadad sladd eller stickpropp eller om värmaren inte fungerar som den ska, den har tappats eller skadats på något annat sätt.
- Om nätsladden skadas måste den bytas ut av tillverkaren eller dess serviceombud eller av en person med liknande kvalifikationer för att undvika fara.
- Undvik att använda en förlängningssladd eftersom den kan överhettas och orsaka brandrisk.
- Använd värmaren i ett välventilerat utrymme. Stick inte in och låt inga främmande föremål komma in i någon ventilations- eller utloppsöppning. För att förhindra en eventuell brand får du inte blockera luftintag eller utloppsöppningar på något sätt. Använd inte på mjuka ytor, som en säng, där öppningar kan blockeras. Använd endast värmaren på plana och torra ytor.
- Placera inte denna värmare nära brandfarliga material, ytor eller ämnen, eftersom det kan finnas risk för brand. Placera brandfarliga material, ytor eller ämnen minst 1 m från produktens framsida och håll dem borta från sidorna och baksidan.
- Använd inte värmaren på platser där bensin, färg eller andra brandfarliga vätskor förvaras, t.ex. i garage eller i verkstäder, eftersom det finns heta ljusbågar eller gnistrande delar inuti värmaren.
- Använd inte den här värmaren i omedelbar närhet av ett badkar, en dusch eller en simbassäng. Placera aldrig värmaren där den kan falla ner i ett badkar eller någon annan vattenbehållare.
- Denna värmare är het när den används. Låt inte bar hud vidröra heta ytor för att undvika brännskador eller personskada. Använd handtag när du flyttar apparaten om det finns sådana.
- Se till att inga andra apparater används på samma elektriska krets som din apparat eftersom det kan leda till överbelastning.
- Denna värmare är fylld med en exakt mängd specialolja.
- Reparationer som kräver att man öppnar oljebehållaren får endast utföras av tillverkaren eller dess servicerepresentant som ska kontaktas om det finns ett oljeläckage.
- Man måste följa föreskrifter om bortskaffande av olja vid skrotning av apparaten.
- Värmaren får inte användas i ett rum vars golvyta är mindre än 5 m².
- Sladden får inte placeras nära apparatens heta yta.
- Täck inte över värmaren för att undvika överhettning.

Korrekt bortskaffning av denna apparat

Denna märkning visar att apparaten inte får bortskaffas tillsammans med hushållsavfall över hela EU. För att förhindra potentiell skada på miljön eller människors hälsa från okontrollerad avfallshantering ska den återvinnas på ett säkert sätt för att befrämja hållbar återanvändning av materiella resurser. Använd tillgängliga retur- och uppsamlingssystem eller kontakta återförsäljaren där apparaten köptes om du vill returnera den. Denna kan ombesörja miljösäker återvinning av denna produkt.




Denna produkt lämpar sig endast för välisolerade utrymmen eller för tillfällig användning.
VARNING: LÄS DENNA BRUKSANVISNING NOGA INNAN ANVÄNDNING

User Manual 1363.100

ASSEMBLY INSTRUCTIONS

Fit the separate foot to the radiator by pushing it firmly onto the control panel and end fin as shown in the diagram.

Check the stability of the heater by standing it on a smooth level surface.
Fitting the foot to the Heater

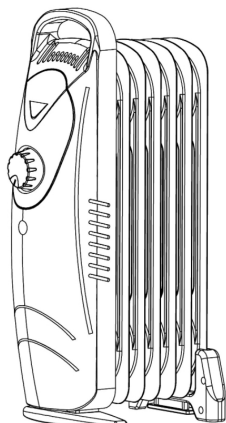

Technical Data

Post Heat Output	Symbol	Value	Unit
------------------	--------	-------	------

Nominal heat output:	P _{nom}	0,6	kW
Minimum heat output (indicative):	P _{min}	N/A	kW
Maximum continuous heat output:	P _{max,c}	0,578	kW

Power Consumption

In off mode	P _o	0,23	W
In standby mode	P _{sm}	N/A	W
In idle mode	P _{idle}	0,22	W
In network standby	P _{ns}	N/A	W

Standby mode with display of information or status		No	
Seasonal space heating energy efficiency in active mode	ns,on	85	%

Post	Unit
Type of regulation for heat output/room temperature	

With mechanic thermostat room temperature control Yes

Safety

When using an electrical appliance, basic safety precautions should always be observed, including the following:

WARNING: To reduce the risk of fire, electrical shock, or injury to person:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. The product is for household use only.
4. Connect the appliance to single phase AC supply of the voltage specified on the rating plate.
5. In order to avoid overheating, do not cover the heater.
6. Never leave the heater unattended while it is in use. Always turn the product to the OFF position and unplug it from the electrical outlet when not in use.
7. Extreme caution is necessary when any heater is used by or near children, invalids or elderly person and whenever the heater is left operating and unattended.
8. The heater must not be located immediately below an electrical socket-outlet.
9. Do not run cord under carpeting and do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.
10. Do not operate the heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.
11. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person to avoid a hazard.
12. Avoid the use of an extension cord as this may overheat and cause a risk of fire.
13. Use the heater in a well-ventilated area. Do not insert or allow objects to enter any ventilation or exhaust opening. To prevent a possible fire, do not block air intakes or exhaust openings in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Use the heater on flat, dry surfaces only.
14. Do not place this heater near flammable materials, surfaces or substances, as there may be a risk of fire. Keep the above flammable materials, surfaces or substances at least 1m from the front of the product and keep them away from the sides and rear.
15. Do not use the heater in any areas where petrol, paint or other flammable liquids are stored e.g. Garages or workshops as a hot, arcing or sparking parts inside the heater.
16. Don't use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Never locate the heater where it may fall into bathtub or other water container.
17. This heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces. If provided, use handles when moving the product.
18. Be sure that no other appliances are in use on the same electrical circuit as your product as an overload can occur.
19. This heater is filled with a precise quantity of special oil.
20. Repair requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leakage.
21. Regulations concerning the disposal of oil when scrapping the appliance have to be followed.
22. The heater should not be used in a room, of which the floor area is less than 5 m².
23. The cord shouldn't be placed nearby the hot surface of the appliance.
24. In order to avoid overheating, do not cover the heater.

INSTRUCTIONS FOR USE

- 1) Choose a suitable location for the heater, taking into account the safety instructions above.
- 2) Insert the plug of the heater into a suitable socket.
- 3) Turn the thermostat knob fully in a clockwise direction to the maximum setting.
- 4) When the heating element is on the power indicator will illuminate.
- 5) When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off the power indicator is seen to go out. After this the heater will keep the air temperature in the room at the set temperature by power indicator on and off automatically.

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



This product is only suitable for well insulated spaces or occasional use.
WARNING: READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE